



THOS. BAKER


A1900.NAT
ALYN OTTOMAN

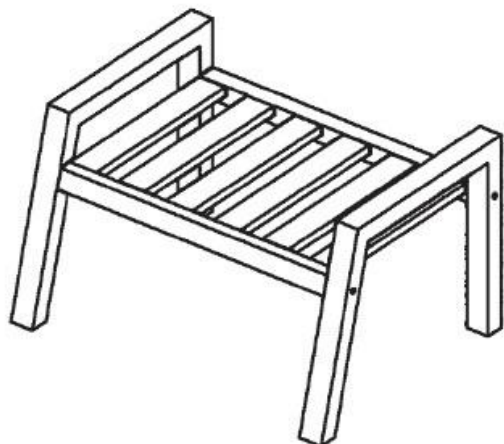

A 2x

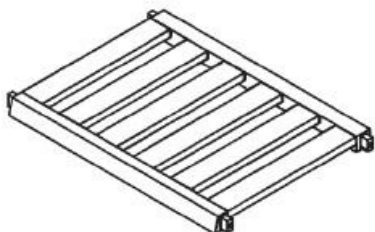


B 2x

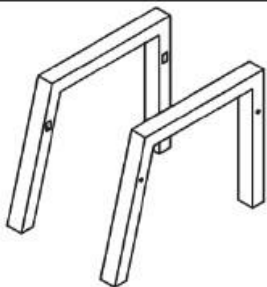

C M6 X 50 4x

D 4x

E 1x

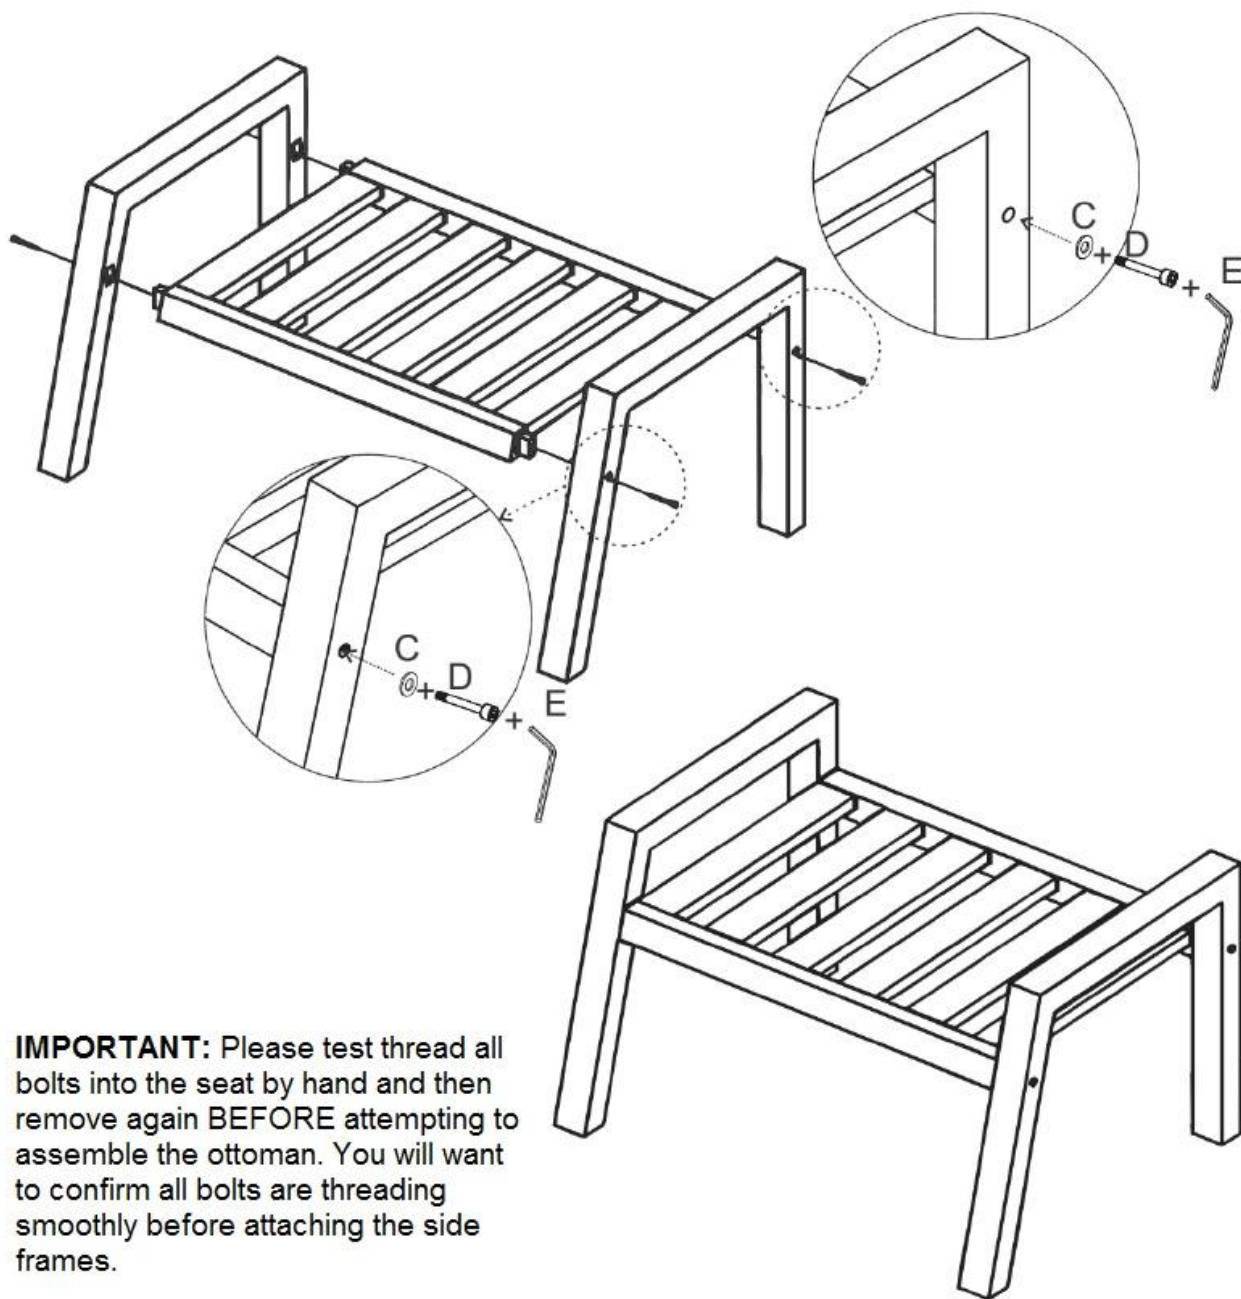

IMPORTANT: Please test thread all bolts into the seat by hand and then remove again **BEFORE** attempting to assemble the ottoman. You will want to confirm all bolts are threading smoothly before attaching the side frames.